

KitchenAdvanced Cooking Thermometer Directions

Assembly:

Lift table stand on the back and open the battery cover.
Insert a AA battery.
Connect the stainless steel probe in the socket on the side.

Thermometer:

Set button TEMP / TIMER to TEMP position.
Press the SEC / UP increase the temperature and HR / MIN / DOWN to lower the temperature.
Selected temperature can be seen on the right. Holding down the button is faster to set the desired temperature.
Press the START / STOP button to activate the alarm and the icon is visible.
When the temperature is reached the alarm rings. Press the START / STOP button to turn off the alarm.

Timer:

Set button TEMP / TIMER to TIMER position.
Press the SEC / UP to set the seconds and HR / MIN / DOWN to set the minutes.
Holding down the button is faster to set the desired time.
Press the START / STOP button to activate the timer and the icon is visible.
When this period expires the alarm rings.
Press the START / STOP button to turn off the alarm.
Pressing simultaneously on the SEC / UP and HR / MIN / DOWN timer is reset.